


## Air circuit breakers Installed optional features UL & IEC

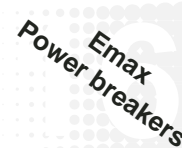

Item	Factory installation list price adder	Field installation catalog number	Field installation list price
<b>24. Instantaneous under voltage trip release</b> <b>Rated voltage</b> 24V 30V 48V 60V 110/120V 125/127V 220/240V 250V 380/400V 440/480V	<b>\$ 456</b>	KE6U0 KE6U9 KE6U8 KE6U7 KE6U6 KE6U5 KE6U4 KE6U3 KE6U2 KE6U1	<b>\$ 456</b>
<b>25. Energized undervoltage release signalling contact</b> Auxiliary contact normally open Auxiliary contact normally closed	<b>82</b>	KE6UE10 KE6UE01	<b>82</b>
<b>26. Auxiliary contacts for breakers</b> Rated 5A-250VAC / 0.3A -125VDC 26a. 2NO +2NC 26b. 5NO + 5NC (not available with PR112) 26c. 15 additional auxiliary contacts for field installation on fixed breakers (connected to breaker with flexible cable) ① 26d. 15 additional auxiliary contacts for field installation on withdrawable breakers (connected to breaker with flexible cable) ①	– <b>753</b> <b>1507</b> <b>1507</b>	KE6A4 KE6A10 KE6A15 KE6A15-W	<b>297</b> <b>1050</b> <b>1507</b> <b>1507</b>
<b>27. Auxiliary contacts for switches</b> 27a. 2NO + 2NC 27b. 5NO + 5NC	<b>297</b> <b>1050</b>	KE6A4 KE6A10	<b>297</b> <b>1050</b>

### 28. – 29. Electrical and mechanical accessories

Item	Factory installation list price adder	Field installation catalog number	Field installation list price
<b>28. Auxiliary contacts for service/test/disconnected position indication</b> <b>Cradle mounted</b> 28a. 5 auxiliary contacts 28b. 10 auxiliary contacts for E1/2 3 pole 28c. 10 auxiliary contacts for E1/2 4 pole 28d. 10 auxiliary contacts for E3 3 pole 28e. 10 auxiliary contacts for E3 4 pole 28f. 10 auxiliary contacts for E4/6 3/4 pole	<b>377</b> <b>753</b> <b>753</b> <b>753</b> <b>753</b> <b>753</b>	KE6PS1 KE2PS3 KE2PS4 KE3PS3 KE3PS4 KE6PS2	<b>377</b> <b>753</b> <b>753</b> <b>753</b> <b>753</b> <b>753</b>
<b>29. Mechanical operation counter</b>	<b>418</b>	KE6MC	<b>418</b>

① Order as alternative to various types of interlock and kirk key lock. For mounting on fixed breaker, also requires accessory 32 (KE6MLP).