

Approximate dimensions Enclosed Horsepower to PST Softstarter type cross-reference



Maximum horsepower in-line

208V	240V	380V	480V	600V	PST Type
5	5	10	10	—	PST30
—	—	—	—	15	
7.5	10	15	20	—	PST30
—	—	—	—	25	
10	10	20	25	—	PST37
—	—	—	—	30	
10	15	25	30	—	PST44
—	—	—	—	40	
15	20	30	40	—	PST50
—	—	—	—	50	
20	25	40	50	—	PST72
—	—	—	—	60	
25	30	50	60	—	PST85
—	—	—	—	75	
30	40	60	75	—	PST105
—	—	—	—	100	
40	50	75	100	—	PST142
—	—	—	—	125	
50	60	100	125	—	PST175
—	—	—	—	150	
60	75	125	150	—	PST210
—	—	—	—	200	
75	100	150	200	—	PST250
—	—	—	—	250	
100	100	150	250	—	PST300
—	—	—	—	300	
125	150	200	300	—	PSTB370
—	—	—	—	350	
—	—	250	350	—	PSTB470
—	—	—	—	400	
150	200	300	400	—	PSTB470
—	—	—	—	500	
200	250	350	500	—	PSTB570
—	—	—	—	600	
250	300	450	600	—	PSTB720
—	—	—	—	700	
300	350	500	700	—	PSTB840
—	—	—	—	800	
350	400	—	800	—	PSTB1050
—	—	—	—	900	
400	450	600	900	—	PSTB1050
—	—	—	—	1000	

Maximum horsepower inside delta

208V	240V	380V	480V	600V	PST Type
7.5	10	15	20	—	PST30
—	—	—	—	25	
10	10	20	25	—	PST30
—	—	—	—	30	
10	15	25	30	—	PST30
—	—	—	—	40	
15	20	30	40	—	PST37
—	—	—	—	50	
20	25	40	50	—	PST44
—	—	—	—	60	
25	30	50	60	—	PST50
—	—	—	—	75	
30	40	60	75	—	PST72
—	—	—	—	100	
40	50	75	100	—	PST85
—	—	—	—	125	
50	60	100	125	—	PST105
—	—	—	—	150	
60	75	125	150	—	PST142
—	—	—	—	200	
75	100	150	200	—	PST175
—	—	—	—	250	
100	100	150	250	—	PST210
—	—	—	—	300	
125	150	200	300	—	PST250
—	—	—	—	350	
—	—	250	350	—	PST300
—	—	—	—	400	
150	200	300	400	—	PST300
—	—	—	—	500	
200	250	350	500	—	PSTB370
—	—	—	—	600	
250	300	450	600	—	PSTB470
—	—	—	—	700	
300	350	500	700	—	PSTB570
—	—	—	—	800	
350	400	—	800	—	PSTB720
—	—	—	—	900	
400	450	600	900	—	PSTB720
—	—	—	—	1000	
400	500	800	1000	—	PSTB720
—	—	—	—	1200	
500	600	900	1200	—	PSTB840
—	—	—	—	1500	
600	700	1200	1500	—	PSTB1050
—	—	—	—	1800	

6