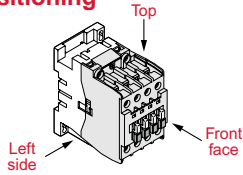


Accessories

Possible accessory combinations for A contactors

Positioning 	Accessories — Front face mounting			Accessories — Side mounting		
	Auxiliary contacts		Pneumatic timers	Auxiliary contacts	Electrical or mechanical interlock ^①	
	1 – pole	4 – pole			VE5-1 or VM 5-1	VE 5-2 VM300H VM300/460H VM750H
	CA5-10 or CA5-01	CA5-40 or CA5-22 or CA5-31	TP – D or TP – I	CAL 5-11 CAL18-11 CAL18-11B		

Configurations of accessories are different depending on whether front or side mounted.

N Contactor relays A and AE Contactors	Accessories — Front mounting					Accessories — Side mounting		
	Type	Main poles	Built-in auxiliary contacts	Auxiliary contact blocks 1-pole CA5-	4-pole CA5-	TP - A Pneumatic timer block	Auxiliary contact Blocks 2-pole CAL5-11, CAL18-11	Interlock units
A9 – A26	– 3 0 – 1 0			1 to 4 CA5-1-pole blocks	OR 1 CA5-4-pole block	OR 1 TP - A block	+ 1 to 2 CAL5-11 blocks	OR 1 VM/E 5-1 block + 1 CAL5-11 block
A9 – A26	– 3 0 – 0 1							
A9 – A26	– 4 0 – 0 0							
A9 – A26	– 2 2 – 0 0							
AE9 – AE26	– 3 0 – 0 0							
AL9 – AL26	– 3 0 – 0 0							
A9 – A16	– 3 0 – 2 2						+ 1 to 2 CAL5-11 blocks	OR 1 VM/E 5-1 block + 1 CAL5-11 block
A9 – A26	– 3 0 – 3 2							OR 1 VM/E 5-1 block + 1 CAL5-11 block
A30, A40	– 3 0 – 1 0			1 to 5 CA5-1-pole blocks	OR 1 CA5-4-pole block + 1 CA5-1-pole block	OR 1 TP - A block + 1 CA5-1-pole block	+ 1 to 2 CAL5-11 blocks	OR 1 VM/E 5-1 block + 1 CAL5-11 block
AL30, AL40	– 3 0 – 1 0							
A30, A40	– 3 0 – 0 1							
AL30, AL40	– 3 0 – 0 1							
AE30, AE40	– 3 0 – 0 0							
A30, A40	– 3 0 – 3 2			1 CA5-1-pole block			+ 1 to 2 CAL5-11 blocks	OR 1 VM/E 5-1 block + 1 CAL5-11 block
A50 – A75	– 3 0 – 0 0			1 to 6 CA5-1-pole blocks	OR 1 CA5-4-pole block + 2 CA5-1-pole blocks	OR 1 TP - A block + 2 CA5-1-pole blocks	+ 1 to 2 CAL5-11 blocks	OR 1 VE5-2 block + 1 CAL5-11 block + 1 VE5-2 + CAL5-11
A45 – A75	– 4 0 – 0 0							
A45, A75	– 2 2 – 0 0							
A95, A110	– 3 0 – 0 0							
A50 – A75	– 3 0 – 2 2			2 CA5-1-pole blocks			+ 1 to 2 CAL5-11 blocks	OR 1 VE5-2 block + 1 CAL5-11 block
A95, A110	– 3 0 – 2 2							OR 1 VE5-2 block + 1 CAL5-11 block
AE50 – AE75	– 3 0 – 0 0			1 to 6 CA5-1-pole blocks	OR 1 CA5-4-pole block + 2 CA5-1-pole blocks	OR 1 TP - A block + 2 CA5-1-pole blocks	+ 1 CAL5-11 block	OR 1 VE5-2 block
AE45 – AE75	– 4 0 – 0 0							
AE45, AE75	– 2 2 – 0 0							
AE95, AE110	– 3 0 – 0 0							
A50 – A75	– 3 0 – 1 1			1 to 6 CA5-1-pole blocks	OR 1 CA5-4-pole block + 2 CA5-1-pole blocks	OR 1 TP - A block + 2 CA5-1-pole blocks	+ 1 CAL5-11 block	OR 1 VE5-2 block
AE50, AE75	– 3 0 – 1 1							
A95, A110	– 3 0 – 1 1							
AE95, AE110	– 3 0 – 1 1							
A145 – AF1650	– 3 0 – 0 0						1 to 2 CAL18-11 blocks + 1 to 2 CAL18-11B blocks	OR 1 CAL18-11 block + 1 CAL18-11B block + VM300H or VM300/460H or VM750H interlock

Contactor mounting configurations (standard from factory)

Auxiliary contacts are mounted on the contactor in the following order:

- Left – 1st
- Right – 2nd
- Top – 3rd (L to R)

① In mounting position 5 (see page 1.36), there should be no more than 2 "N.C." front-mounted auxiliary contacts – The CAL 5-11 side-mounted blocks offer additional "N.C." contacts.

② Whatever the mounting position (see page 1.36), there should be no more than 2 "N.C." front-mounted auxiliary contacts – The CAL 5-11 side-mounted blocks offer additional "N.C." contacts.